

# **GSW110P**



Main Features		
Frequency	Hz	50
Voltage	V	400
Power factor	cos φ	0.8
Phase		3

Power Rating		
Standby power LTP	kVA	114.67
Standby power LTP	kW	91.74
Prime power PRP	kVA	103.84
Prime power PRP	kW	83.07

### Ratings definition (According to standard ISO8528 1:2005)

### PRP - Prime Power:

It is defined as being the maximum power which a generating set is capable of delivering continuously whilst supplying a variable electrical load when operated for an unlimited number of hours per year under the agreed operating conditions with the maintenance intervals and procedures being carried out as prescribed by the manufacturer. The permissible average power output over 24 h of operation shall not exceed 70 % of the prime power.

### **LTP** - Limited-Time running Power:

It is defined as the maximum power available, under the agreed operating conditions, for which the generating set is capable of delivering for up to 500 h of operation per year (whose no more than 300 for continuative use) with the maintenance intervals and procedures being carried out as prescribed by the manufacturers. No overload capability is available.

Engine specifications		
Engine manufacturer		Perkins
Model		1104C-44TAG2
[50Hz] Exhaust emission level		Stage II
Engine cooling system		Water
Nr. of cylinder and disposition		4 in line
Displacement	cm <sup>3</sup>	4410
Aspiration		Turbocharged
Speed governor		Electronic
Prime gross power PRP	kW	93.6
Maximum gross power LTP	kW	103
Oil capacity	1	8
Lube oil consumption @ PRP (max)	%	0.15
Coolant capacity	I	12.6
Fuel		Diesel
Specific fuel consumption @ 75% PRP	g/kWh	213.6
Specific fuel consumption @ PRP	g/kWh	202.8
Starting system		Electric
Starting engine capability	kW	3
Electric circuit	V	12



# **Engine Equipment**

# Standards

The above ratings represent the engine performance capabilities to conditions specified in ISO 8528/1, ISO 3046/1:1986, BS 5514/1

# Fuel system

Rotary type pump

# Lube oil system

Wet steel sump with filler and dipstick

# Filter

- Fuel filter
- Air filter
- Oil filter

# **Cooling system**

- Mounted radiato
- Thermostatically-controlled system with belt driven coolant pump and pusher fan

Alternator Specifications		
Alternator		Mecc Alte
Model		ECP34-2S/4
Voltage	V	400
Frequency	Hz	50
Power factor	cos ф	8.0
Туре		Brushless
Poles		4
Standard AVR		DSR
Voltage tolerance	%	1
Efficiency @ 75% load	%	92.5
Class		Н
IP protection		23



### **Mechanical structure**

Robust mechanical structure which permits easy access to the connections and components during routine maintenance check-ups.

### Voltage regulator

Voltage regulation with DSR. The digital DSR controls the range of voltage, avoiding any possible trouble that can be made by unskilled personnel. The voltage accuracy is ±1% in static condition with any power factor and with speed variation between 5% and +30% with reference to the rated speed.



### Windings / Excitation system

Generator stator is wound to 2/3 pitch. This eliminates triplen (3rd, 9th, 15th ...) harmonics on the voltage waveform and is found to be the optimum design for trouble-free supply of non-linear loads. The 2/3 pitch design avoids excessive neutral currents sometimes seen with higher winding pitches. MAUX (Standard): The MAUX MeccAlte Auxiliary Winding is a separate winding within the main stators that feeds the regulator. This winding enables to take an overload of 300% forced current (short circuit maintenance) for 20 seconds. This is ideal for motor starting requirements.

### Insulation / Impregnation

Insulation is of class H standard. Impregnation is made with premium tropicalised epoxy resins by dipping and dripping. High voltage parts are impregnated by vacuum, so the insulation level is always very good. In the high-power models, the stator windings undergo a second insulation process. Grey protection is applied on the main and exciter stator to give enhanced protection.

### Reference standards

Alternator manufactured according to , and complies with , the most common specification such as CEI 2-3, IEC 34-1, EN 60034-1, VDE 0530, BS 4999-5000, CAN/CSA-C22.2 No14-95-No100-95.

# **Genset equipment**

### BASE FRAME MADE OF WELDED STEEL PROFILE, COMPLETE WITH:

- · Anti-vibration mountings properly sized
- Welded or Screwed support legs. (according to canopy size)

### PLASTIC FUEL TANK WITH THE FOLLOWING COMPONENT:

- · Filler neck
- Air breather (ventilation pipe)
- · Minimum fuel level sensor



· Oil draining facilities

### **ENGINE COMPLETE WITH:**

- · Battery
- · Liquids (no fuel)

### CANOPY:

- Soundproof canopy made up of modular panels, realized with zinced steel as treatment against corrosion and aggressive conditions, properly fixed and sealed allowing a full weatherproof enclosure.
- Easy access to the genset for maintenance purposes thanks to: Wide lateral access doors fixed by stainless steel hinges and provided with plastic lockable handles; Detachable panels, with screws holes protected by rubber tap.
- Control panel protection door provided with suitable window and lockable handle.
- Lateral air inlet opening properly protected and soundproofed. Exhaust air outlet from the roof, trough wet section protected by proper grid.
- Single detachable lifting eye placed on the roof.

### SOUNDPROOF:


- Noise attenuation thanks to soundproofing material
- · Efficient residential silencer placed inside the canopy









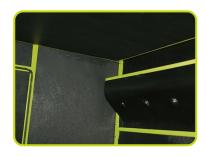

Dimensional data		
Length	(L) mm	2400
Width	(W) mm	1000
Height	(H) mm	1530
Dry weight	Kg	1400
Fuel tank capacity	1	209



Autonomy		
Fuel consumption @ 75% PRP	l/h	18.02
Fuel consumption @ 100% PRP	l/h	22.60
Running time @ 75% PRP	h	11.60
Running time @ 100% PRP	h	9.25

Noise level		
Guaranteed noise level (LWA)	dB(A)	96
Noise pressure level @ 7 m	dB(A)	67



Installation data		
Total air flow	m³/min	190.93
Exhaust gas flow @ PRP	m³/min	15.2
Exhaust gas temperature @ LTP	°C	514

Electrical Data		
Battery capacity	Ah	70
MAX current	Α	165.52
Circuit breaker	Α	160

Control panel availability	
MANUAL CONTROL PANEL	MCP
MANUAL CONTROL PANEL FULL OPTION	MPF
AUTOMATIC CONTROL PANEL	ACP
MODULAR PARALLEL PANEL	MPP

Mounted on the genset and complete of: analogue instrumentation, control, protection of the generating set, protected through door with lockable handle.

### **INSTRUMENTATION (ANALOGUE)**

- · Voltmeter (1 phase)
- Ammeter (1 phase)
- Hours-counter

### **COMMANDS**

- · Start/stop selector switch with key
- Emergency stop button

### **PROTECTION WITH ALARM**

- · Low fuel level
- · Battery charger failure
- low oil pressure
- high engine temperature
- Earth Fault.

### PROTECTIONS WITH SHUTDOWN

- Low fuel levelBattery charger failure
- low oil pressure
- high engine temperature.
- Circuit breaker protection: III poles
- Emergency stop button

### **OTHERS PROTECTIONS**

• Panel protected through door with lockable handle.









### **OUT PUT PANEL MCP**

Power cables connection to Circuit Breaker.	
External Terminal Board (ETB)	Optional
Socket kit	Optional

# MPF - Manual control panel full option

Mounted on the genset and complete of: analogue instrumentation, control, protection of the generating set, protected through door with lockable handle

# **INSTRUMENTATION (ANALOGUE)**

- Voltmeter with selector switch (3 phases)
- · Frequency meter
- Ammeter with selector switch (3 phases)
- Hours-counter
- Fuel level indicator
- Oil pressure indicator
- Engine temperature indicator

### **COMMANDS**

- · Start/stop selector switch with key
- Emergency stop button



### PROTECTION WITH ALARM

- · Low fuel level
- Battery charger failure
- · low oil pressure
- high engine temperature
- Earth Fault



### PROTECTIONS WITH SHUTDOWN

- · Low fuel level
- · Battery charger failure
- low oil pressure
- high engine temperature
- Circuit breaker protection: III poles
- Emergency stop button



### **OTHERS PROTECTIONS**

• Panel protected through door with lockable handle

### **OUT PUT PANEL MPF**

ETB- External Terminal Board		ETB
Socket kit		Standard
Individual CB and Earth Fault protection		
3P+N+T 400V 63A IP67	n	1
3P+N+T CEE 400V 16A IP67	n	1
230V/16A 2P+T CEE IP67	n	1
230V 16A SCHUKO IP68	n	1



# **ACP - Automatic control panel**

Mounted on the genset, complete with digital control unit for monitoring, control and protection of the generating set, protected through door with lockable handle

### **DIGITAL INSTRUMENTATION**

- Generating set voltage (3 phases)
- Mains voltage
- Generating set frequency
- Generating set current (3 phases)
- · Battery voltage
- Power (kVA kW kVAr)
- Power factor Cos φ
- Hours-counter
- Engine speed r.p.m.
- Fuel level (%)
- Engine temperature (depending on model)

### **COMMANDS AND OTHERS**

- Four operation modes: OFF Manual starting Automatic starting Automatic test
- Pushbutton for forcing Mains contactor or Genset contactor
- Push-buttons: start/stop, fault reset, up/down/page/enter selection
- · Remote starting availability
- DC system disconnection switch
- Acoustic alarm
- Automatic battery charger
- RS232 Communication port
- Settable PASSWORD for protection level

### **PROTECTIONS WITH ALARM**

- Engine protections: low fuel level, low oil pressure, high engine temperature
- Genset protections: under/over voltage, overload, under/over frequency, starting failure, under/over battery voltage

# PROTECTIONS WITH SHUTDOWN

- Engine protections: low fuel level, low oil pressure, high engine temperature
- Genset protection: under/over voltage, overload, under/over battery voltage, battery charger failure
- Circuit breaker protection: III poles
- · Earth Fault included in the control unit

### **OTHERS PROTECTIONS**

- Emergency stop button
- · Panel protected through door with lockable handle









### **OUT PUT PANEL ACP**

Power cables connection to Circuit Breaker.	
Predisposed for remote control optional:	RCG
External Terminal Board (ETB)	Optional
Socket kit	Optional



# MPP - Modular parallel panel

Mounted on the genset, complete with digital control unit IG-NTC for monitoring, control, protection and load sharing for both single and multiple gen-sets operating in standby or parallel modes (up to 32 gen-sets in island).

### **DIGITAL INSTRUMENTATION (through IG-NTC control unit)**

- Mains: voltage, Intensity, Frequency.
- · Mains kW kVAr -Power factor Cos f.
- Generating set voltage (3 phases).
- · Generating set frequency.
- Generating set current (3 phases).
- Generating set Power (kVA kW kVAr).
- Generating set Power factor Cos f.
- · Generating set kWh and kVAh.
- · Battery voltage.
- · Hours-counter.
- Engine speed r.p.m.
- Fuel level (%).
- Engine temperature (depending on model).
- Oil pressure (depending on model).

### **COMMAND AND OTHERS**

- Graphical display 128x64 pixels.
- Operation modes: OFF AMF function Single Parallel to mains Island application -Single Parallel to Mains AMF application - Multiple parallel genset Island application.
- Pushbutton for forcing Mains Breaker/contactor or Genset Breaker/contactor.
- Push-buttons: start/stop, fault reset, up/down/page/enter selection.
- Multiple parallel and Power Management operation with digital load AVR sharing.
- Automatic synchronizing and power control (via speed governoer or ECU)
- Baseload Import/Export and Peak shaving
- Voltage and PF control (AVR).
- Configurable digital I/O (12/12) and analogue inputs (3).
  Integrate PLC programmable functions.
- Event-based history (up to 500records).
- Selectable measurement range 120/277V and 0-1/0-5A.
- · Remote starting and Blocking signal availability.
- DC system disconnection switch.
- Acoustic alarm.
- · Automatic battery charger.
- 2xRS232/RS485/USB Comunication ports.
- Settable PASSWORD for protection level.

### PROTECTION WITH ALARM AND SHUTDOWN

- Engine protections: low fuel level, low oil pressure, high engine temperature.
- Genset protections: under/over voltage, overload, under/over frequency, starting failure, under/over battery voltage
- Others: overcurrent, shortcircuit, reverse power, Earth fault









### OTHERS PROTECTION:

- Circuit breaker protection: IV poles Motorized.
- Emergency stop button.
- Panel protected through door with lochetable handle

### **OUT PUT PANEL MPP**

Multi-pin connectors (in and out ) for parallel with other generators	n	2
Connecting cable with 2 connectors multipin (length 10m)	n	1
External terminal board		ETB



# Supplements:

To be ordered with the equipment

# **CONTROL PANEL SUPPLEMENT**

RCG - Various supplements for remote controls - available for models:	ACP MPP
TLP - Various supplements for remote signals - available for models:	ACP MPP
ADI - Adjustable Differential Intensity - available only for models:	ACP
TIF - IV Poles Circuit Breaker instead of III - available for models:	ACP MCP
ETB - External Terminal Board - available for models:	MCP ACP



# Socket kit

SKB socket kit B - available for models:		ACP MCP
Component version		IP67
Individual CB and Earth Fault protection		V
3P+N+T 400V 63A IP67	n	1
230V/16A 2P+T CEE IP67	n	1
230V 16A SCHUKO IP68	n	1
3P+N+T CEE 400V 16A IP67	n	1
NB: for assembly is necessary:		ETB




# **GENSET EQUIPMENT**

KPR - Premium Kit (Leak Proof Tray - Leakage detection sensor - Manual oil drain pump)	
AFP - Automatic Fuel Pump	ACP MPP
KRT - Kit Rental which includes fuel filter with water separator,	

# **Extended Fuel Tank**

Fuel tank capacity	1	890
Length (Genset)	(L) mm	2414
Width (Genset)	(W) mm	1168
Height (Genset)	(H) mm	2275

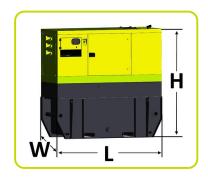

# **ENGINE SUPPLEMENTS**

PHS - Coolant Pre-Heating System - available for models:	ACP MPP
--	---------

# Accessories

Items available as accessory equipment

STR - Site trailer

RTR - Road Trailer



### LTS - Load Transfer Switch [Accessories for ACP Automatic Control Panel]

The Load Transfer Switch (LTS) panel operates the power supply changeover between the generator and the Mains in backup applications, guarantying the feeding to the load within a short period of time.

It consists of a standalone cabinet which can be installed separate from the generating set. The logic control of the power supply changeover is operated by means of the Automatic Control Panel (ACP) mounted on the generating set, so therefore none logic device is required on the LTS panel.

# LTS Type ATyS\_D:

- Box type: steel enclosures
- Installation mode: Wall mounted <400A; Floor Standing =>630A
- Door: Hinged door closed with double barb locking.
- Ingress Protection: IP43
- · Gland Plates: Removable on the top & bottom side
- · Connections: Bottom/Bottom
- · Motor unit
- · Gland Plates: Removable on the top & bottom side
- Connections: Bottom/Bottom
- Motor unit
- Switch position indicator
- Auto/Manual cover selector
- Housing for manual handle
- Padlocking mechanism
- Two side by side mounted load break switches
- Poles 4
- Double coils self-powered
- Voltage (coils): 208/277VAC (Tolerance+/-20% 166/333VAC)
- Frequency 50 & 60HZ
- Interface ATyS D10, fixed on the door for the status indication: Two lights to indicate
  the voltage presence of the grid and the diesel generator; Two lights for the switch
  position; Functionality mode (auto/manual) and cover protection IP65.
- Compliant with IEC 60947-3, EN 61439-6-1 and GB 14048-11

# LTS





### LTS SUPPLEMENTS AVAILABLE ON REQUEST:

- ESB Emergency Stop Button (installed on the panel front)
- APP Additional IPXXB Protection (internal plexiglass)

